BEFORE USING THE WASHER

- In case of pump drained washer, remove the cap-hose from the drain hole.

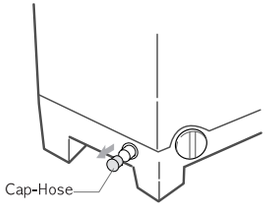

CAUTIONS

- **Be sure that the washer is grounded.**
  To avoid electrical shock,use a metal pipe for the ground connection. But, don't ground the washer with gas pipes or telephone lines to avoid dangers of explosion or lightning strike.

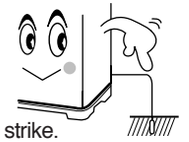

- **Do not put your hands into the spin dryer basket when it is spinning.**
  Your fingers can be caught by spinning laundry and damaged.

- **Never allow children to operate or play with the washer.**
  Children playing with the washer may accidentally fall into the washing tub.

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation** opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.
- **If** the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer,because special purpose tools are required.
- **Warning** to avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.

PRECAUTIONS WHEN OPERATING

- **Don't use excessively hot water. (50˚C or more)**
  Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.
- **Before washing,check all pockets.**
  If nails or pins remain in pockets,they may damage the washer or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **Be sure to cover with the inner cover on laundry before spinning.**
  This prevents laundry from being tossed out and damaged.
- **To avoid water splashes, close the wash tub lid.**
- **Be sure lay the drain hose down (in case no drain pump)**
- **Never splash water on the control panel.**

DESCRIPTION OF PARTS

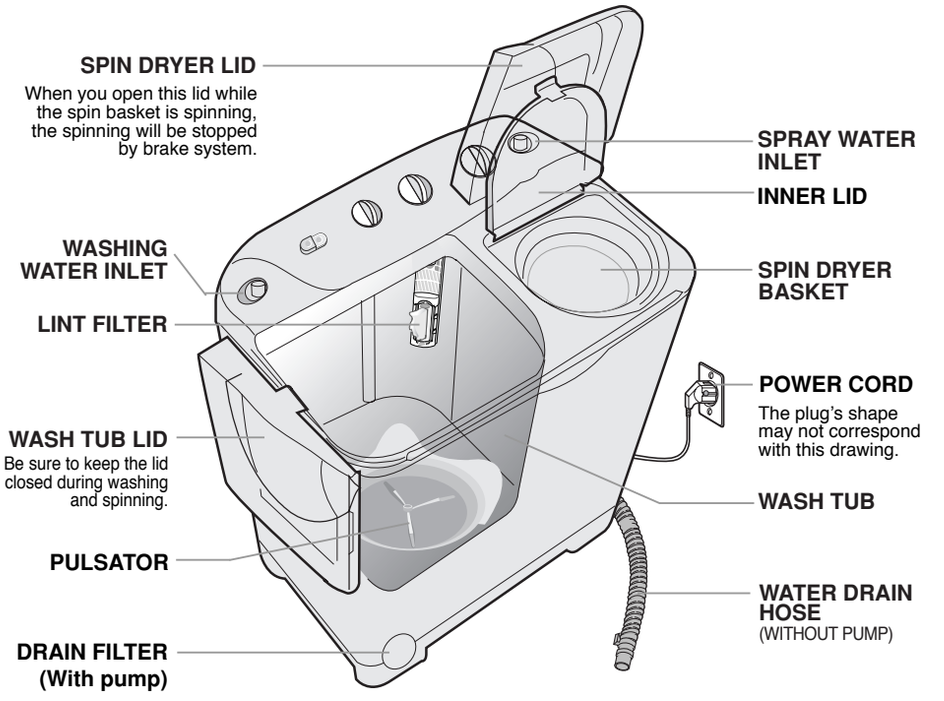
SPIN DRYER LID
When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.
SPRAY WATER INLET
INNER LID
WASHING WATER INLET
SPIN DRYER BASKET
LINT FILTER
POWER CORD
The plug's shape may not correspond with this drawing.
WASH TUB LID
Be sure to keep the lid closed during washing and spinning.
WASH TUB
PULSATOR
WATER DRAIN HOSE
(WITHOUT PUMP)
DRAIN FILTER
(With pump)

CONTROL PANEL

1. **WASH SELECTOR**
   This is used to select Soft or Normal mode.
2. **WASH TIMER**
   This is used to set the wash time, 1-15 minutes.
3. **CYCLE SELECTOR**
   This is used to select the Washing or draining.
4. **SPIN DRY TIMER**
   This is used to set the spin time, 1-5 minutes.
5. **WASH WATER INLET**
   Connect water supply hose here.
6. **SPIN WATER INLET**
   Connect water supply hose here.

If the wash and spin time is set less than 1 minute, sometimes the timer will not be reset, so you should first set the wash and spin timer to 2 minutes and then turn it back to desired time.

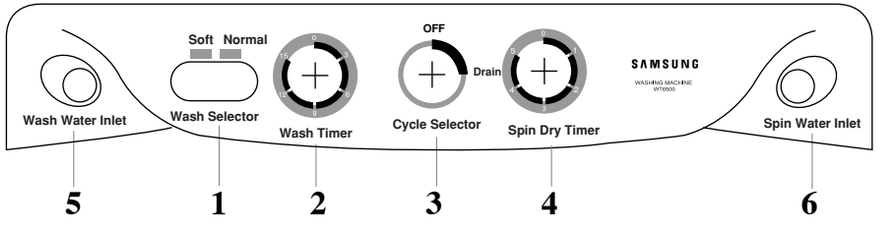

WASHING PROCEDURE

TO WASH

1. Set the Cycle Selector knob to "OFF".
2. Connect the water supply hose to the Wash Water Inlet.
3. Set the Wash Selector knob to "Soft" or "Normal".
4. Add appropriate amount of detergent and load laundry in the wash tub.
   - Connect the other end of the water supply hose to a water tap and then open the tap.
   - When a suitable water level is reached, turn the tap off.
5. Set the Wash Timer 1-15 minutes.
6. After washing, set the Cycle Selector knob to 'Drain' for draining.

SPIN DRY

1. Transfer the clothes into the spin basket and arrange the clothes evenly.
2. Be sure to attach the safety cover and close the inner lid.
3. Close the spin dryer lid.
4. Set the Spin Dry Timer 1-5 minutes.

RINSING

1. Set the Cycle Selector knob to "OFF".
2. Load the laundry into the basket and connect the water supply hose to the Wash Water Inlet. Be sure that water does not overflow the top of the wash tub.
3. Set the Wash Timer to 2-3 minutes.
4. After washing, set the Cycle Selector knob to 'Drain' for draining.
   - Repeat this cycle until drain water is clean. (2-3 cycles)

OVERFLOW RINSE

1. Connect the water supply hose to the Wash Water Inlet and the other end to a water tap.
   - Be sure to select an appropriate flow (adjusting the water tap) to prevent waste and splash of water.
2. Set the Wash Timer to 6-8 minutes.
3. As soon as the Wash Timer shuts off, turn off the water tap.
4. Set the Cycle Selector knob to 'Drain' for draining ".

SPRAY RINSE

1. Load the laundry evenly into the spin basket.
2. Press the laundry evenly, put the safety cover into the basket and close the inner lid.
3. Close the spin dryer lid.
4. Connect the water supply hose to a water tap and open it to supply water.
5. Set the Spin Timer to 2-3 minutes.

INSTALLATION

If the washer is placed on an uneven or weak surface, noise or vibration may be occurred.

ENVIRONMENT

Leave some space.

- Decide the laying route of drain hose.
- Space at least 10cm between the washer and the wall.

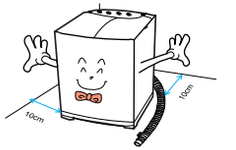

Place the washer in good ventilation and avoid direct sunlight.

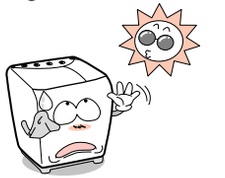

Place the washer on a sturdy flat surface.

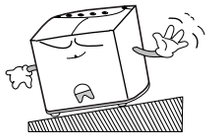

Never place the washer in cold weather condition or the place with fumes.

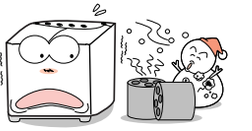

Keeping Level

- Supply water into the wash tub up to the half height level of the pulsator.
- Keep the water level being evenly in middle level of the six blades.

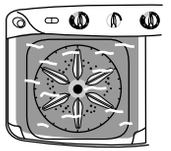

Connecting the Water Supply Hose

- Fit the water supply hose into a water tap.
- Connect the other end of it to the wash water inlet or spin water inlet on the washer.
- Open the tap to supply water and check if there is any water leakage.

Connecting the Water Drain Hose

- Fit the water drain hose to the drain outlet.
- Push it with force further to the bottom of the drain outlet.
- Check the drain hose for not getting apart from the outlet by drawing it.

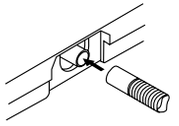

- Lay the drain hose as lower as possible to guarantee smooth draining.
- If the drain hose is not arranged properly, you may not get smooth drainage, or even the drainage being failed.
- Check the cases as illustrated below and, if you need a drain hose, purchase it from the local service center or agent.

When the drain hose is fit on the outlet,

- the height of curve should not exceed 10cm.

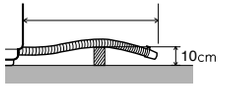

When the drain hose is connected and used,

- its length should not exceed 3m.

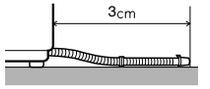

Do not immerse the drain hose inwater.

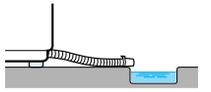

CLEANING THE MACHINE

CLEANING THE LINT FILTER

- Regularly clean the lint filter, otherwise the lint will be carried to the clothes and the filter itself be damaged.
- Push down (1) and pull (2) it out as shown in figure.
- Remove the collected lint and rinse the filter net.

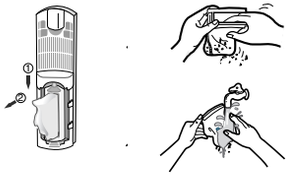

CLEANING THE OVERFLOW FILTER

- To prevent the outlet from being clogged or clothes being recontaminated by the overflow filter, the filter should be cleaned at least once a month.
- Pull the upper side of the overflow filter with two fingers into the hole 'A' in the direction of arrow as shown in figure.
- Clean residue off the front, back and inner filter.
- Hold the overflow filter at the center and push
  (2) the bottom of the filter into the slot
  (1) until you hear a click.

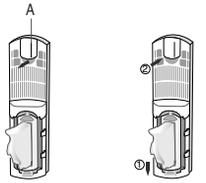

LAUNDRY GUIDE

Detergent Consumption

• Using standard detergent would get better data.

WATER LEVEL	QUANTITY OF LAUNDRY	QUANTITY OF DETERGENT
HIGH(50L) 5	3.0 - 5.0kg	50g
MIDDLE(42L) 3	2.0 - 3.0kg	42g
LOW(34L) 1	1.0 - 2.0kg	34g

MAINTENANCE

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

The clothes should be arranged evenly in the spin basket and pressed level using safety cover.
If not, the clothes may be tossed out of the basket when spinning, and even severe noise may be occurred and the lifespan of the washer may be shortened.

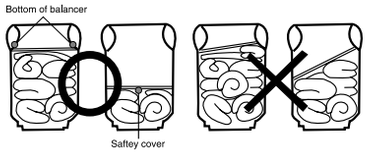

TROUBLESHOOTING

TROUBLE	CHECK POINT	TROUBLE	CHECK POINT
No power supplied	• **Is the voltage used normal?** - This machine uses only 220V power. • **Is the power cord plugged?** - Plug the power cord. Is the laundry	**No spinning**	• **Are the laundry arranged evenly?** - Even it. • **Is the machine set up completely?** - Check it out.
No draining	• **Is the drain hose put down ?** - Take down it. • **Is the drain hose curved?** - Stretch it. • **Is the drain hose clogged?** - Clean it off. • **Is the Cycle Selector knob set to "Drain"?** - Check it out.	**No water supply**	• **Is the water supply stopped?** - If so, close the water tap and put off the power. • **Have you opened the water tap?** - Check it out.

SAMSUNG

SAMSUNG Spin Washing Machine
Owner's Instructions

WT6500

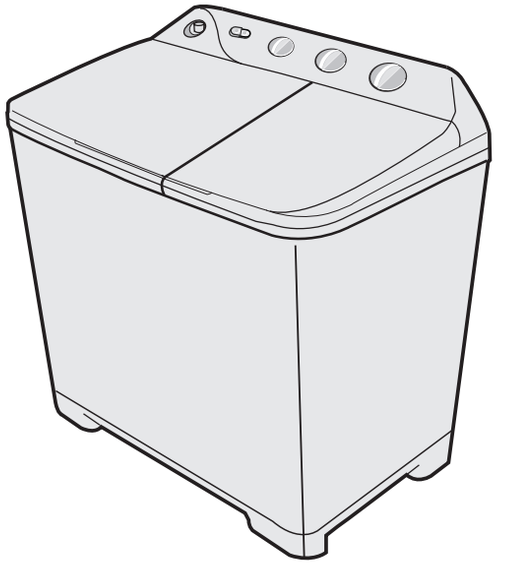

Before operating the unit, please read this manual thoroughly, and retain for future reference.

BEFORE USING THE WASHER 1
CAUTIONS 1
PRECAUTIONS WHEN OPERATING 1
DESCRIPTION OF PARTS 2
CONTROL PANEL 2
WASHING PROCEDURE 3
TO WASH 3
SPIN DRY 3
RINSING 3
OVER FLOW RINSE 4
SPRAY RINSE 4
INSTALLATION 4
ENVIRONMENT 4
KEEPING LEVEL 5
CONNECTING THE WATER SUPPLY HOSE 5
CONNECTING THE WATER DRAIN HOSE 5
CLEANING THE MACHINE 5
LAUNDRY GUIDE 6
MAINTENANCE 6
TROUBLESHOOTING 6
SPECIFICATIONS

SPECIFICATION

DIMENSIONS	D(776mm) X W(434mm) X H(920mm)
WATER PRESSURE	0.05MPa - 0.3MPa
WEIGHT	23kg
STANDARD QUANTITY OF WATER	50L